

Follow these simple instructions and your blind installation is as easy as 1.2.3.

1. MOUNTING BRACKETS.

With blind fully opened (Figure 1), hold up to wall in the position it will hang. Make sure blind is centered left and right and height is correct. (If blind is too long, see shortening instructions, Figure 3).

Make sure blind is level. Make pencil marks 1/4" inch past each end of headrail.

Now place mounting brackets in level position on pencil marks with large hole facing the floor (See Figure 1 - mounting brackets). Secure brackets with screws.

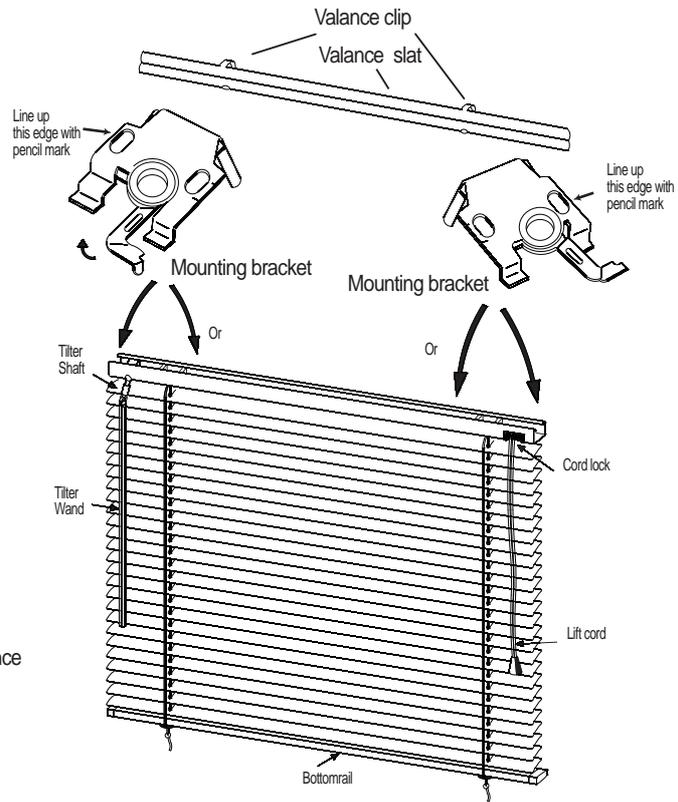


Figure 1.

2. SNAP ON FRONT CAPS.

Slide headrail into mounting brackets. Close hinged door.

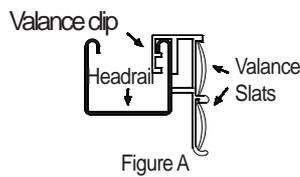


Figure A

3. WAND ASSEMBLY.

Slide plastic collar up the tilt shaft past the hole (See Figure 2). Place hook at top of wand through tilt shaft hole. Slide plastic collar down tilt shaft to cover hook. This will lock the wand in place.

VALANCE ASSEMBLY.
Slide valance slats into valance clips. Then hook valance clips onto top headrail (See Figure A).

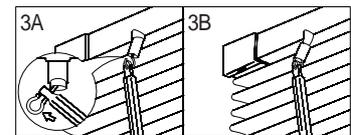


Figure 2.

TO OPERATION BLINDS

Important: Always tilt blind horizontally before raising or lowering. This increases the life of the blind.

TO LOWER BLIND:

Move cord to left pulling down gently until cord lock releases. Allow cord to slip through figures until blind reaches desired level. Move pull cord to the right and release. Blind will lock automatically.

TO RAISE BLIND:

Pull cord downward until blind reaches desired height. Release cord and blind locks automatically.

TO TILT BLIND:

Rotate wand to attain desired slat positions.

TO SHORTEN BLIND:

After installing blind, check to see exactly how much shorter blind should be. First, remove bottomrail buttons with screw driver. Untie knot in lift cord. Pull cord through hole in bottomrail and holes in slats to desired shortening point. Remove bottomrail and extra slats. Replace bottomrail onto ladders nearest desired shortening point. Insert lift cord through hole in bottomrail and through buttons and re tie knot. Re-tie string tape around bottomrail. Cut off excess string tape leaving one (1") inch on ends. Insert these ends into bottomrail holes and replace buttons.


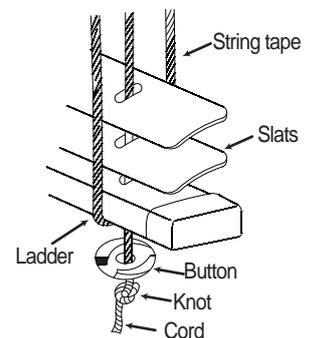


Figure 3.

Important Note

Always tie the cord to cord cleat for safety reasons.

WARNING/ADVERTENCIA

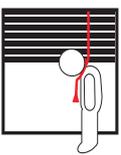


Window blind cord can STRANGLE your child.

To prevent strangulation, purchase cordless products or products with inaccessible cords.

La cuerda de la persiana puede ESTRANGULAR a su niño.

Para evitar el estrangulamiento, compre alternativas cuerda o productos con cuerdas inaccesibles.

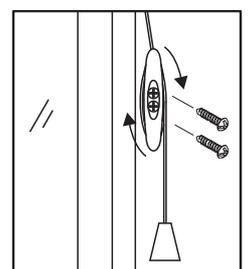

Cord Cleat