 
 


Simple Touch® Programming Instruction


* Remote Frequency Connection :

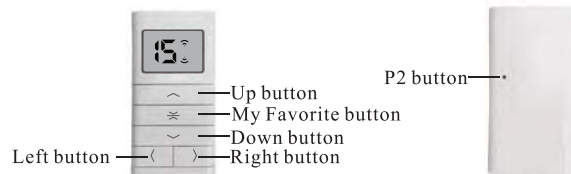 


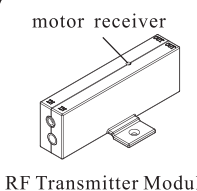


- Select channel from channel 1 to 15.
- Press motor receiver button with pin for 2 seconds.
- Click P2 button twice.
- Wait for motor to jog.
- Click Up button.
- RF connection completed.

 
* Setup Top Limit




- Press Up button to move shade to top limited location.
- Press Up and My Favorite buttons at the same time for 5 seconds.
- 
- Top limit setup completed.


 
* Setup Bottom Limit




- Press Down button to move shade to bottom limited location.
- Press Down and My Favorite buttons at the same time for 5 seconds.
- 
- Bottom limit setup completed.

* Setup My Favorite Position




- Operate the shade to your favorite position.
- Press My Favorite for 5 seconds. 
- Then press My Favorite again for 3 seconds. 
- My Favorite position setup completed.


* Setup channel number

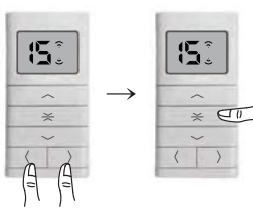

- Press and hold left and right buttons at the same time, and then "C" will show on the screen.
- Wait until "15" shown on the screen, then release buttons.
- Press the left or right button.
- Select the channel number you like.
- Press and hold the favorite (middle) key ("0" will appear first).
- Release the button when the channel number appears again.
- Setting completed.

* Reset/ Re-programing



- Press 3 buttons at the same time.
- Long 
- Start from step "Remote Frequency Connection", and follow by the instruction above.

Simple Touch Remote Programming Instruction

- ❖ Extend and Retract the Shade Before My Favorite Position setup :
 - Press the **DOWN** button to Extend the Shade.
 - Press the **UP** button to Retract the Shade.
 - Press **My Favorite** button to Stop.

 - ❖ Extend and Retract the Shade After My Favorite Position setup :
 - Press the **DOWN** button for 1.5 seconds to continuing Extend the Shade.
 - Press the **UP** button for 1.5 seconds to continuing Retract the Shade.
 - Press **My Favorite** button for 1 second to operate shade to your favorite position.
 - Press any button to stop

 - ❖ Press < or > button to select the desired channel (Channel 1 - Channel 15). To control 15 motors synchronously, move to channel "0" for group control.

 - ❖ Add a duplicated remote control:
 - Click **P2** twice on the existing remote
 - Click **P2** once on the new adding remote

 - ❖ Disconnect a duplicated remote to the original existing remote:
 - Click **P2** button with pin 2 times on the remote you want to continue use.
 - Click **P2** button once on the remote you want to remove.

 - ❖ Remove a remote control:
 - Click **P2** button once on the remote you want to remove
 - Click **My Favorite** button
 - Click **P2** button again
-

Simple Touch Remote Programming Instruction

Q&A

- Q: Can one shade program on multiple channels?
A: No, one shade can only program on one channel
 - Q: Can multiple shades program on ONE channel?
A: Yes, only on channel "0". Channel "0" is designed to control shades which connect to this remote. The maximum controlled quantity is 15 shades.
 - Q: Can this new remote connect to old motor?
A: Yes, programming needs to follow by old motor instruction, but no clock and alarm setting on mini Simple Touch.
 - Q: Can old remotes (1 channel and 5 channels) connect to new motor?
A: Yes, just followed by new motor program instruction. Both clock and alarm work on old remote.
 - Q: What is the distant limit for new remote?
A: 164 ft.
 - Q: Can I control shades from other room?
A: Not recommend.
 - Q: How do I reset size limit?
A: Erase frequency setting and then reprogram it.
 - Q: How to hide unused channels?
A: Press left and right buttons for 5 seconds, select the channel# you need, and then press "favorite" button.
 - Q: How to unhide unused channels?
A: Press left and right buttons for 5 seconds, select channel 15, and then press "favorite" button
 - Q: How long is the warranty of remote and motor?
A: 1 year manufacture warranty
-

Simple Touch Remote Programming Instruction

Trouble Shooting

- Remote doesn't work.
 - Please check batteries on both remote and shade first
 - Make sure all 4 cord connectors are plug into RF box completely
- Remote can only control motorized shade to one direction
 - Please make sure all 4 cord connectors are plug into RF box completely.
- When remote is unable to connect to shade after consumer received shades?
 - Make sure all cords are plugged in completely.
 - Erase frequency setting
 - Program motorized shade from 1st step.

Please call customer service at 1-800-879-9512 for any questions.